

Ⓓ Aufbauanleitung

Ⓕ Notice de montage

Ⓖ Montagehandleiding

Ⓒ Montážní návod

Ⓗ Szerelési útmutató

Ⓓ Montaj talimatları

Ⓖ Assembly instruction

Ⓙ Istruzioni di montaggio

 
 
 
 
 
 
Ⓟ Instrukcja montażu

Ⓒ Navod na montaž

Ⓡ Instrucțiuni de montaj

Ⓡ Инструкция по монтажу

# 36-1026-46-000

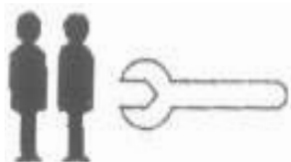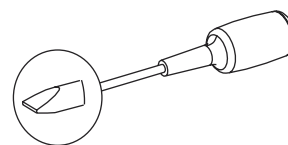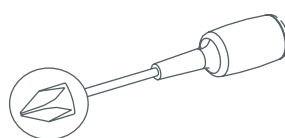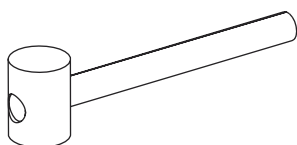
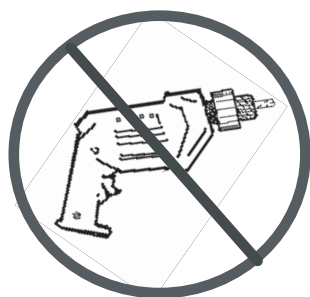
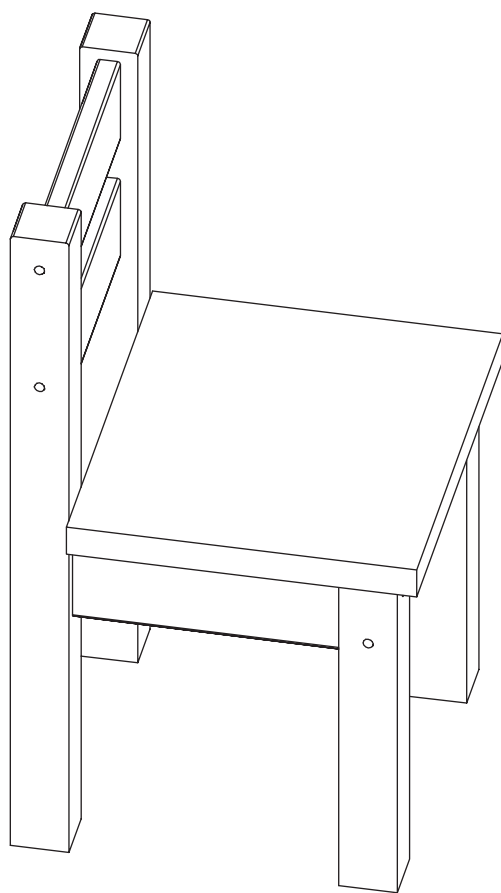


# Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба



Name • Nom • Nome • Naam • Nazwa • Jméno • Názov  
Név • Denumire • Isim • Название

Nr. • No. • N° • Č • Sz • Номер

   
Typ • Type • Tip • Tipus • Druh • Тиро • Тип

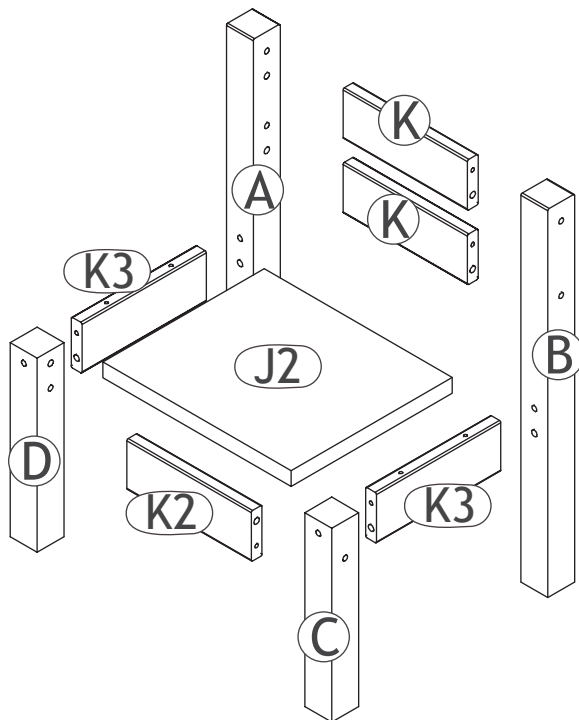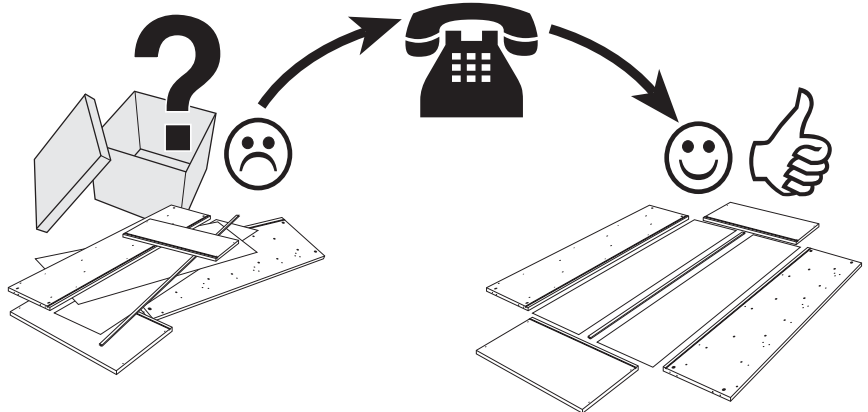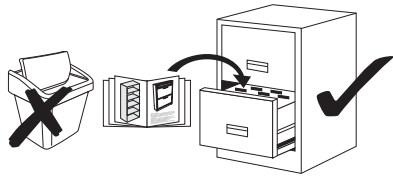


A	112122-46	x1
B	112121-46	x1
C	112211-46	x1
D	112212-46	x1
K	112224-46	x2
K2	112220-46	x1
K3	112223-46	x2
J2	112610-46	x1

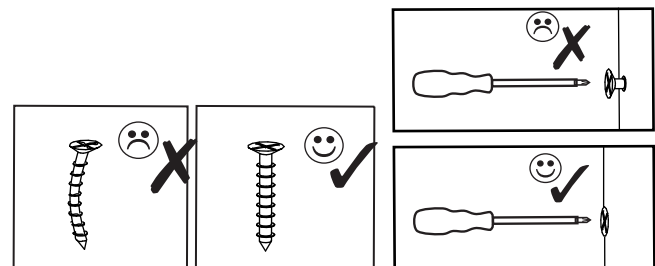  

① (8x40)

 

② (7x70)

 


③ (d=4)




④ (4,5x80)

		mm	
①	1-000013-00	8x40	x10
②	1-000167-07	7x70	x10
③	1-000015-07	Z4	x1
④	1-000168-07	4.5x80	x4

 
1-000001=

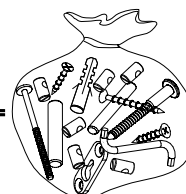

 1.

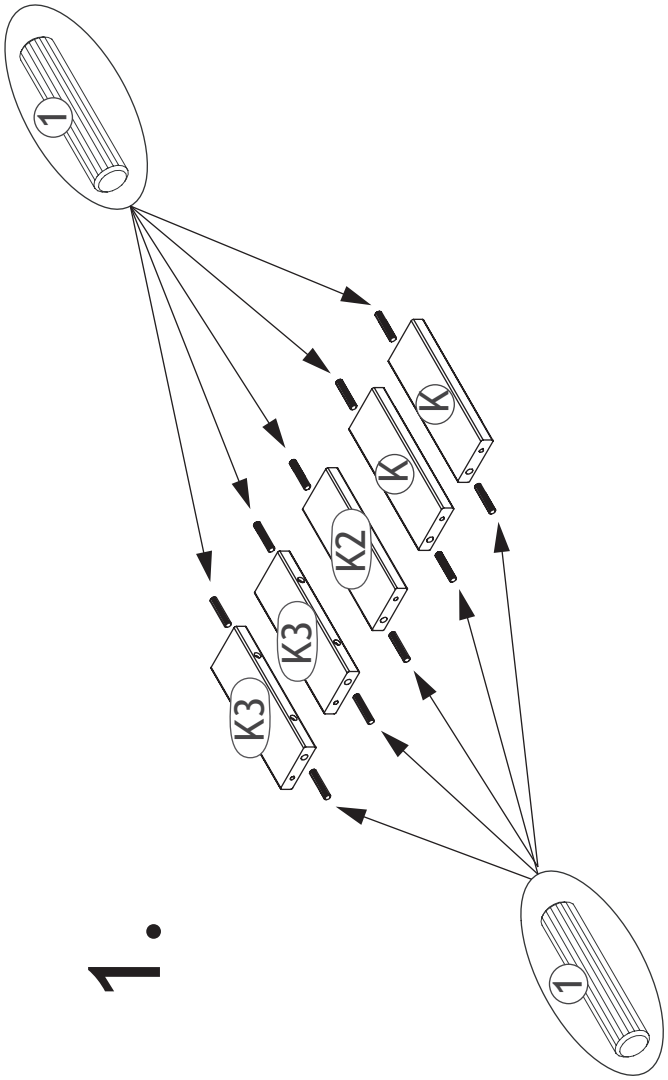

 2.

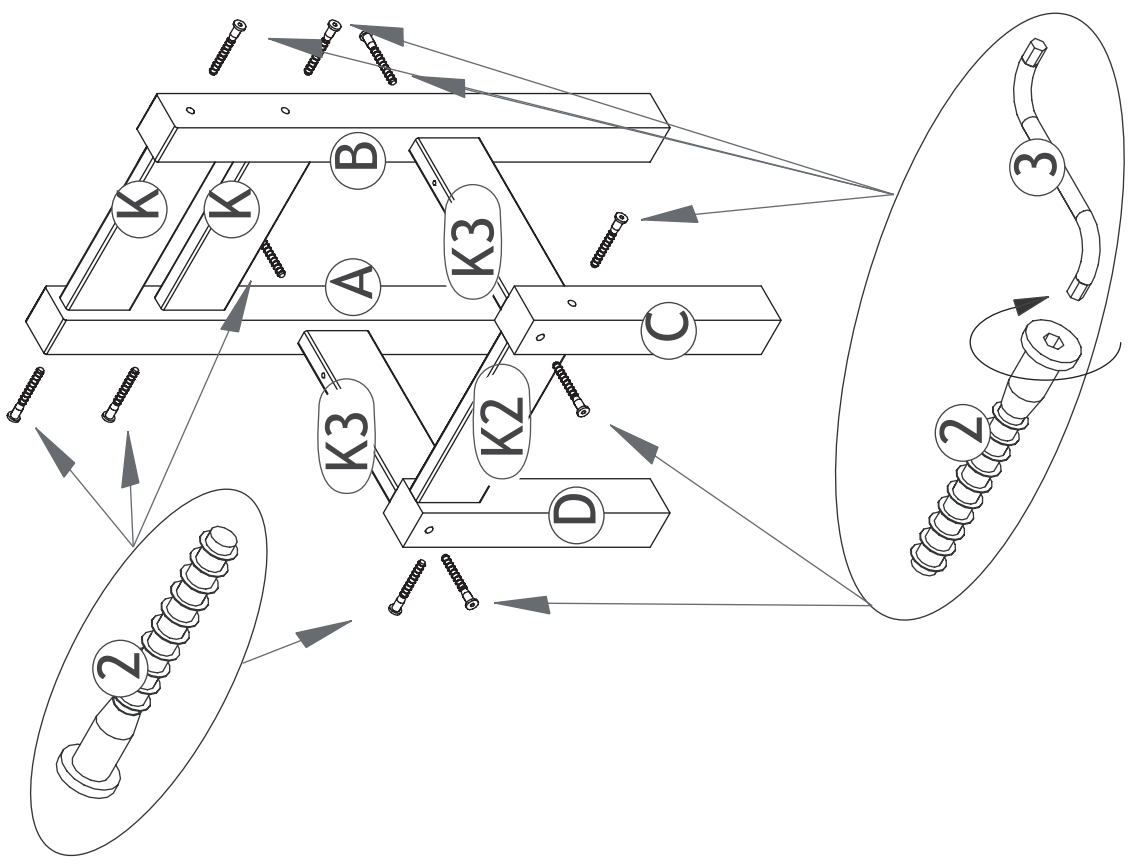

3.

