
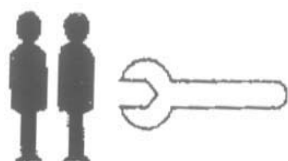
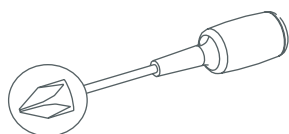
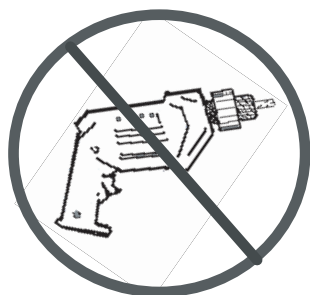


- Ⓛ Aufbauanleitung  
Ⓛ Notice de montage  
Ⓛ Handleiding voor de montage  
Ⓛ Montážní návod  
Ⓛ Szerelési útmutató  
Ⓛ Montaj talimatları
- Ⓛ Assembly instruction  
Ⓛ Istruzion di montaggio  
Ⓛ Instrukcja montażu  
Ⓛ Navod na montaž  
Ⓛ Instrucțiuni de montaj  
Ⓛ Инструкция по монтажу

# 36-1046-32-00A


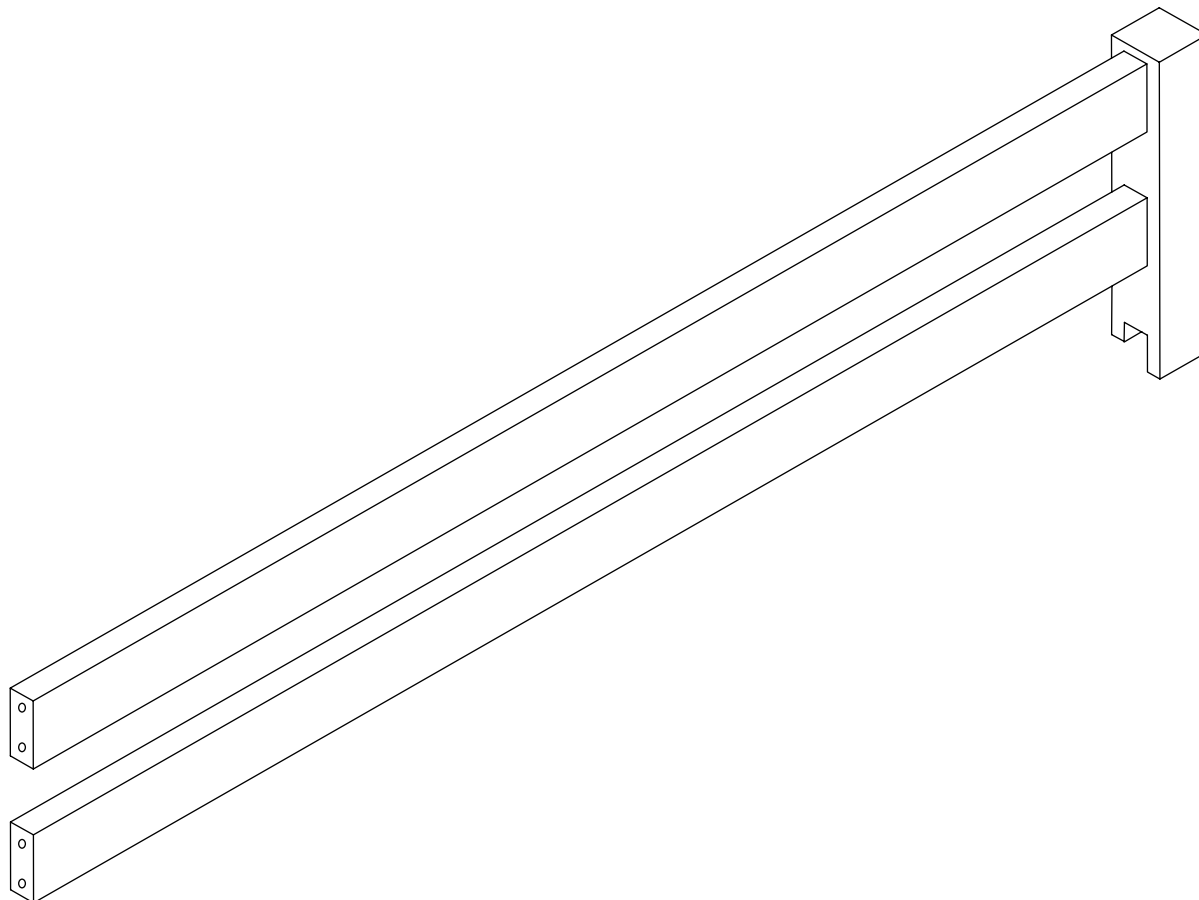


# Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба


Name • Nom • Nome • Naam • Nazwa • Jméno • Názov  
Név • Denumire • Isim • Название

Nr. • No. • N° • Č • Sz • Номер


Typ • Type • Tip • Tipus • Druh • Тиро • Тип

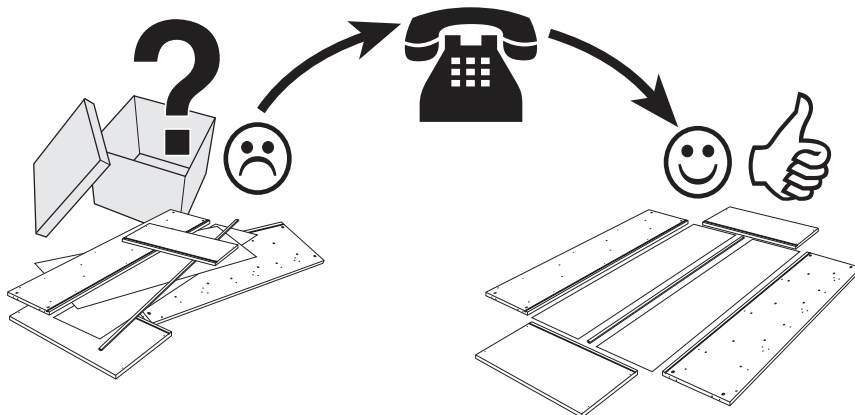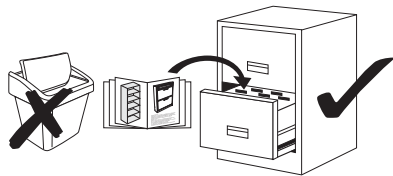


0  
10  
20  
30  
40  
50  
60  
70  
80  
90  
100  
110  
120  
130  
140  
150  
160  
170  
180

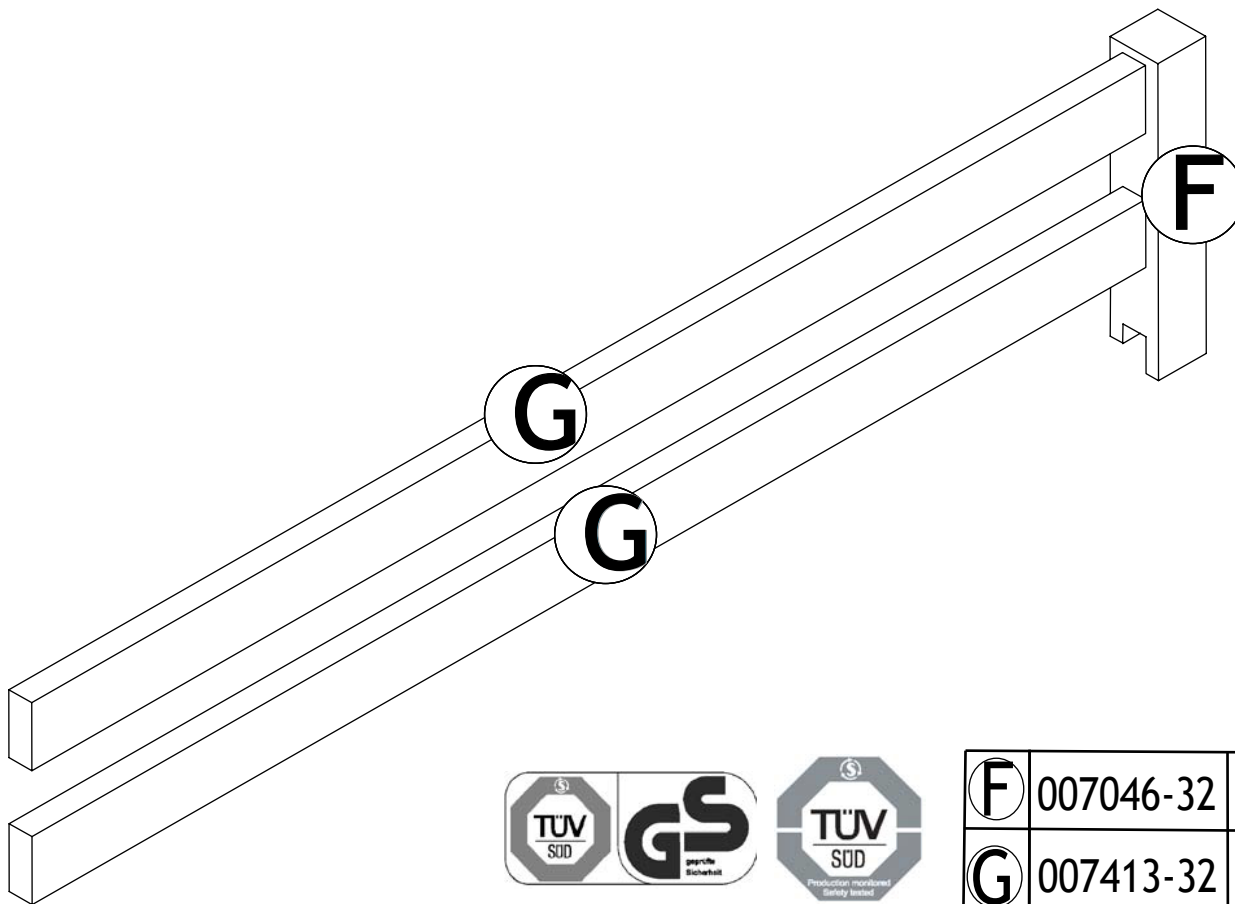


<b>F</b>	007046-32	x1
<b>G</b>	007413-32	x2

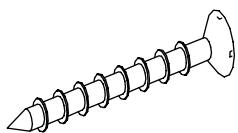


21

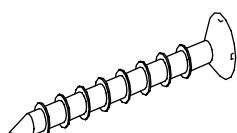


23

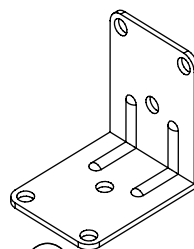

24

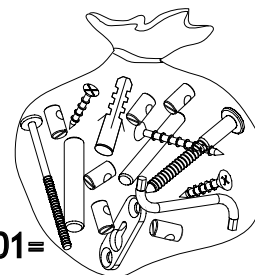

1-000001=

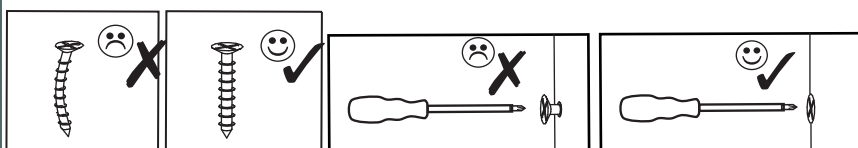

		mm	
21	1-000020-07	3,5x25	x3
23	1-000093-07	3,5x15	x3
24	1-000018-07	48x40x2,5	x1

# 5.

