

Ⓓ Aufbauanleitung

Ⓕ Notice de montage

Ⓖ Handleiding voor de montage

Ⓒ Montážní návod

Ⓗ Szerelési útmutató

Ⓓ Montaj talimatları

Ⓖ Assembly instruction

Ⓙ Istruzione di montaggio

 
Ⓟ Instrukcja montażu

Ⓚ Navod na montaž

Ⓡ Instrucțiuni de montaj

Ⓡ Инструкция по монтажу

36-2552-LR-000




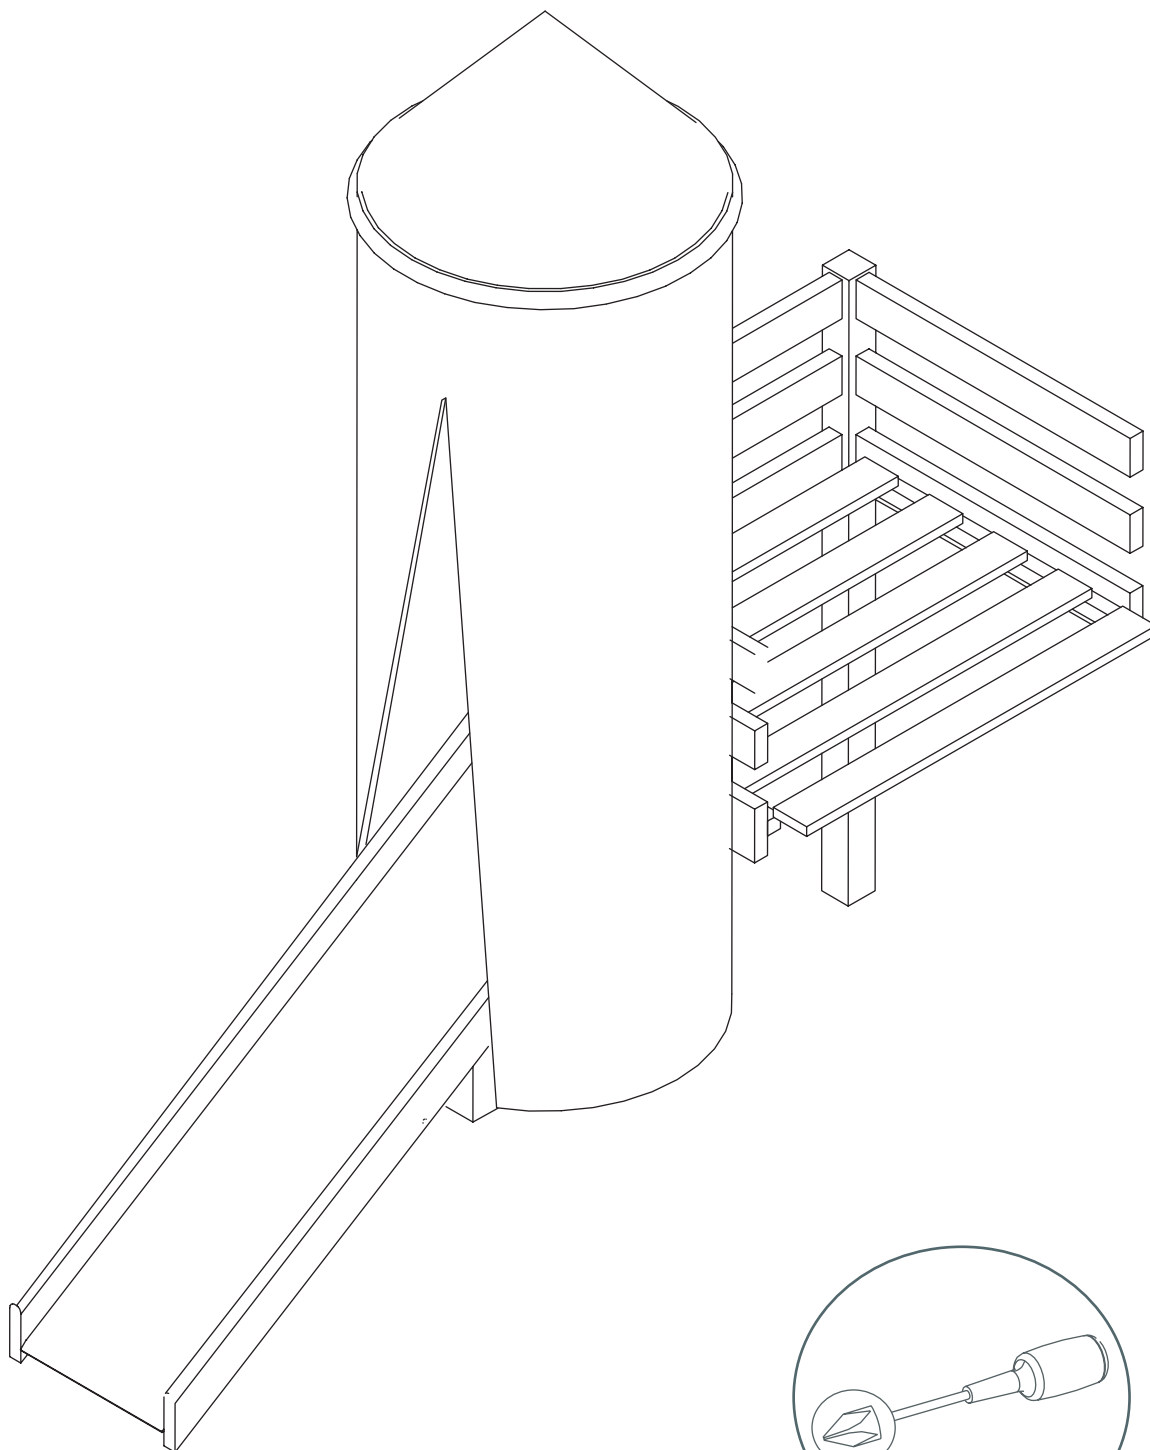


Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба




Name • Nom • Nome • Naam • Nazwa • Jméno • Názov
Név • Denumire • Isim • Название

Nr. • No. • N° • Č • Sz • Номер

    Typ • Type • Tip • Tipus • Druh • Тип • Тип

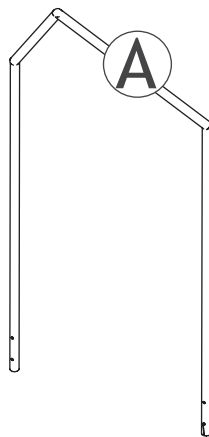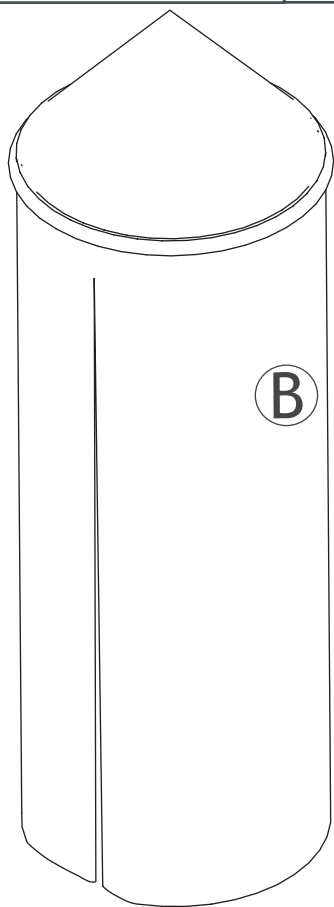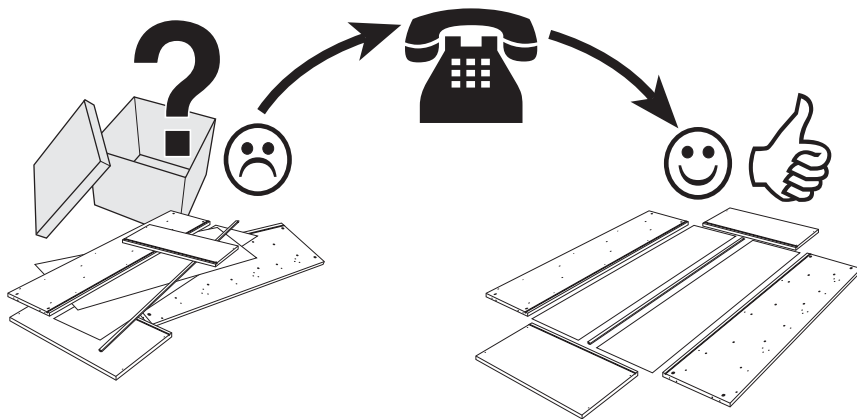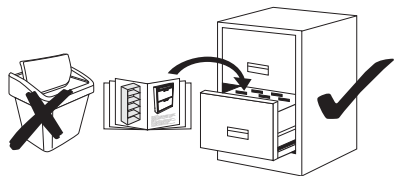


A	x1
B	x1

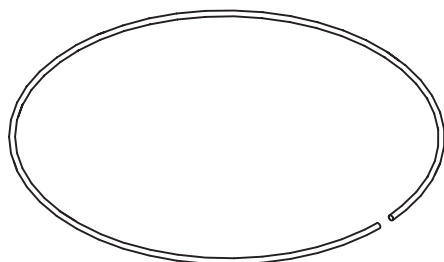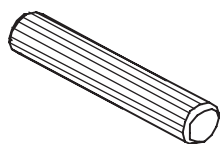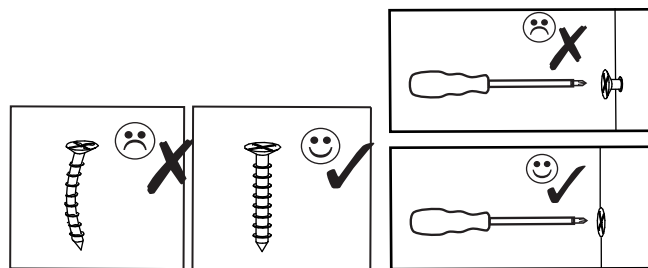   

		mm	
①	1-000109-00	8x30	x1
②	1-000145-57		x1
③	1-103265-07	3,5x35	x4

 1-000001=

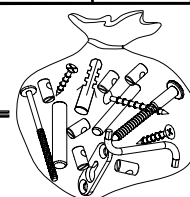


①

②


③

0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180

 
1.
1.1

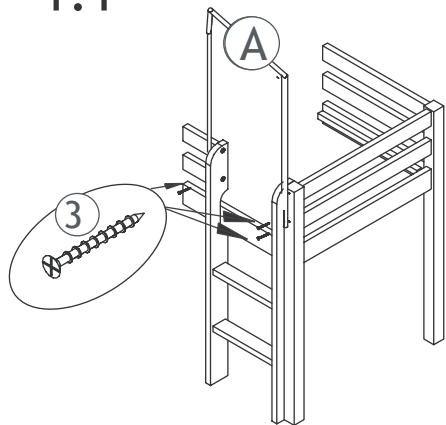

 
1.1

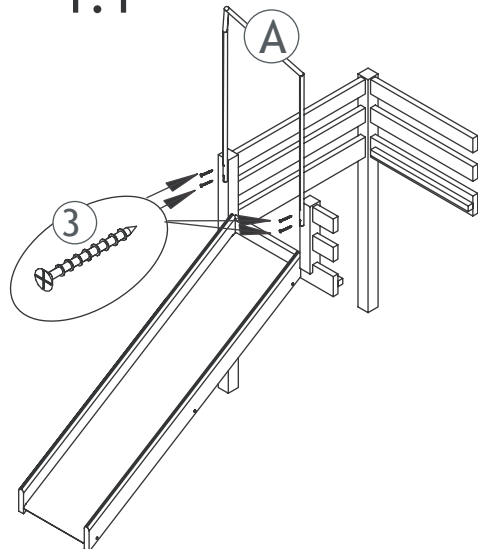

 2.

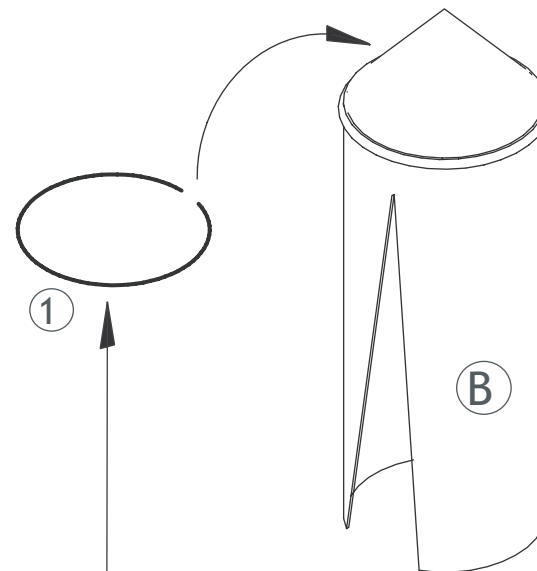

 3.
3.1

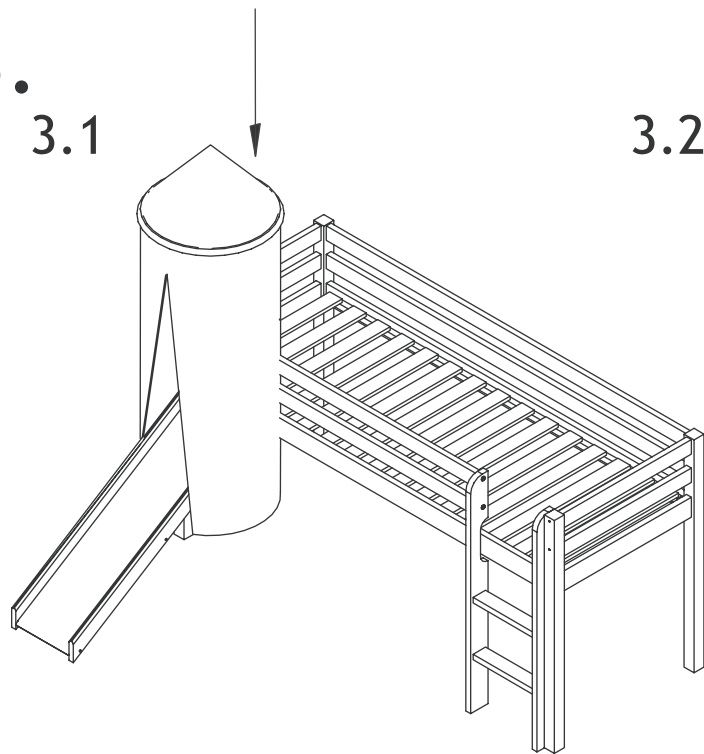

3.2

