

Ⓛ Aufbauanleitung

Ⓛ Notice de montage

Ⓛ Handleiding voor de montage

Ⓛ Montážní návod

Ⓛ Szerelési útmutató

Ⓛ Montaj talimatları

Ⓛ Assembly instruction

Ⓛ Istruzione di montaggio

 
 
Ⓛ Instrukcja montażu

Ⓛ Navod na montaž

Ⓛ Instrucțiuni de montaj

Ⓛ Инструкция по монтажу

36-2560-LR-07M


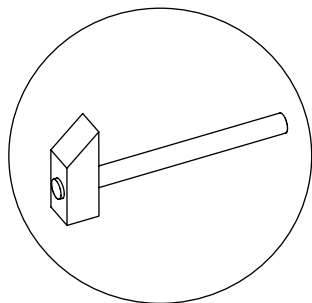
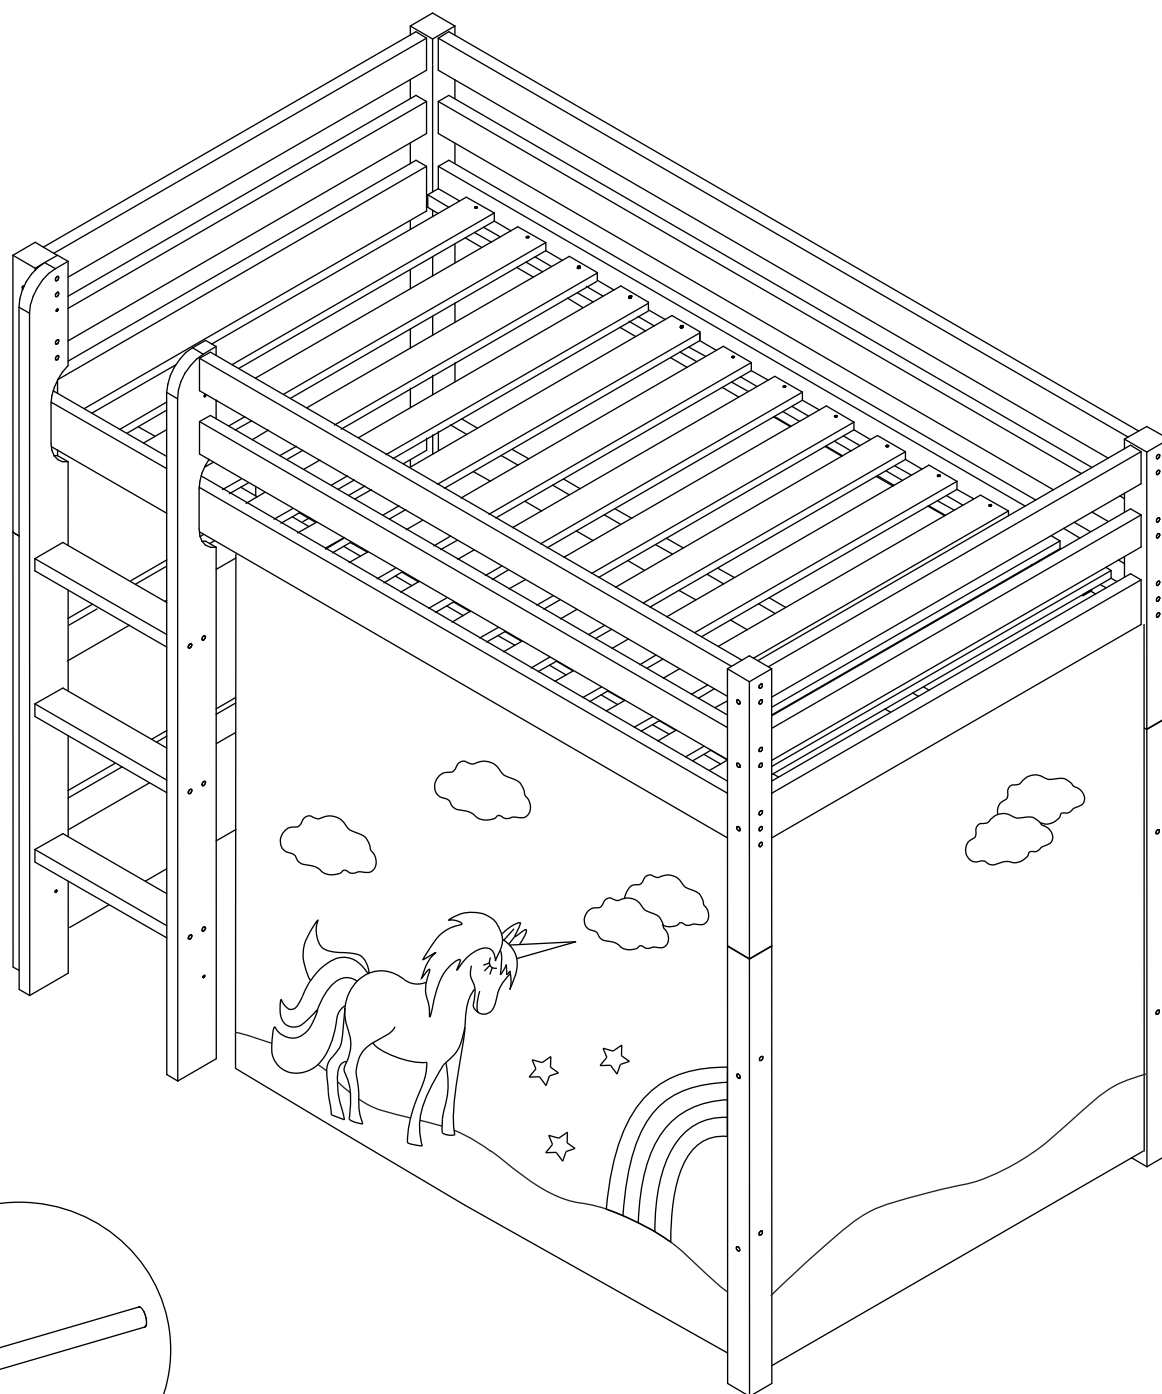


Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба


Name • Nom • Nome • Naam • Nazwa • Jméno • Názov
Név • Denumire • Isim • Название

Nr. • No. • N° • Č • Sz • Номер

  
Typ • Type • Tip • Tipus • Druh • Тіро • Тип

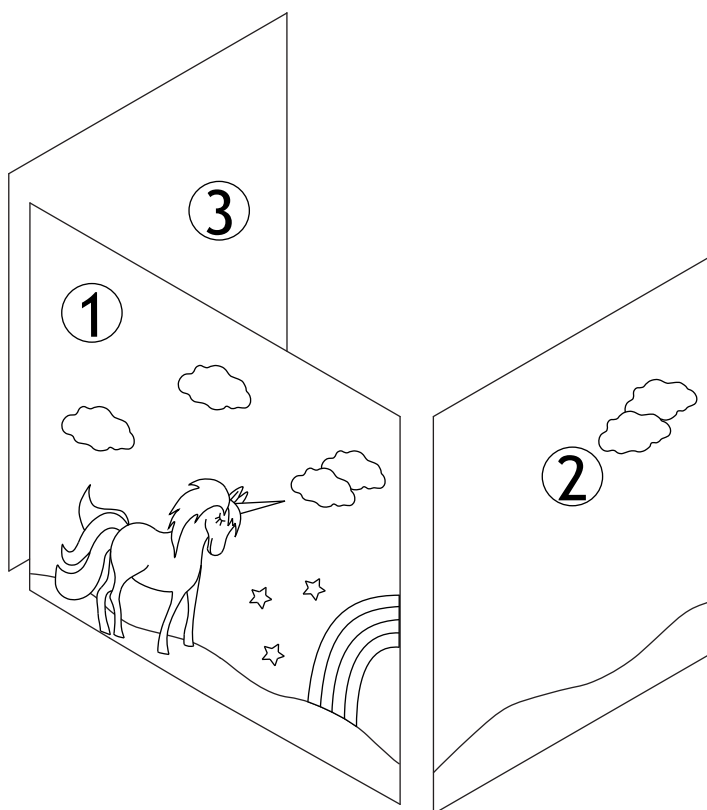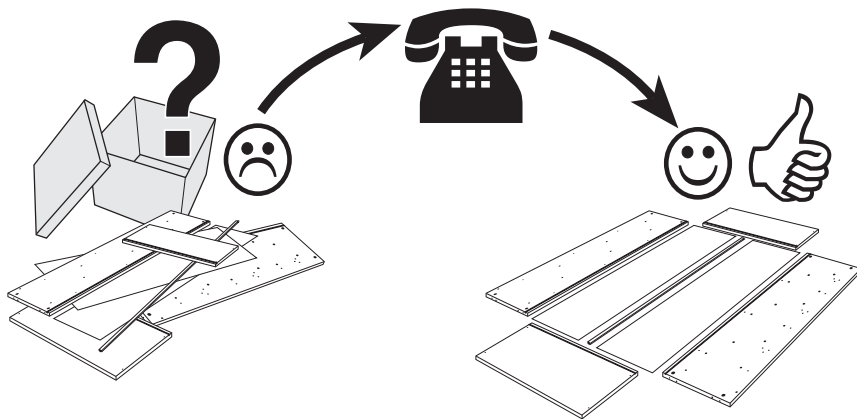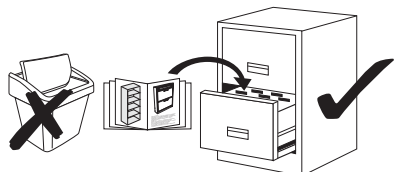

1	x1
2	x1
3	x1

 

a

 

b

		mm	
a	1-000147-07	2x25	x6
b	1-000146-07	2x25	x6
c	1-000151-75	1400	x1
d	1-000150-75	600	x2

 


c




d


1-000001=

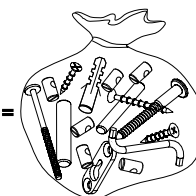

 
1.

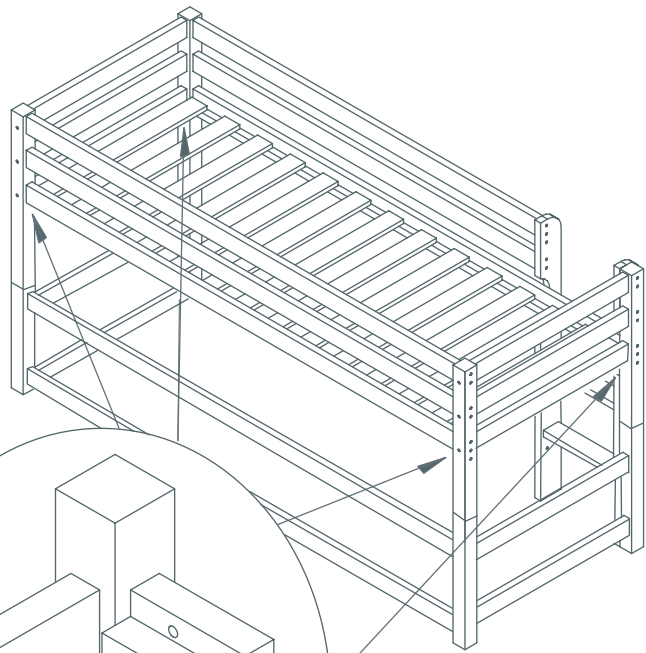

 
2.

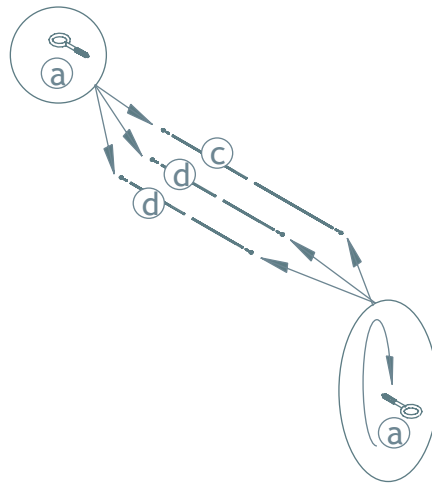

 3.

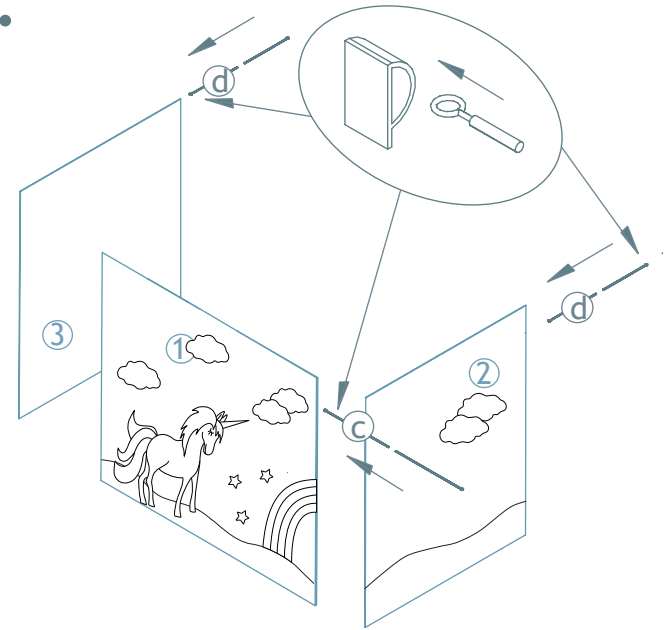

 4.

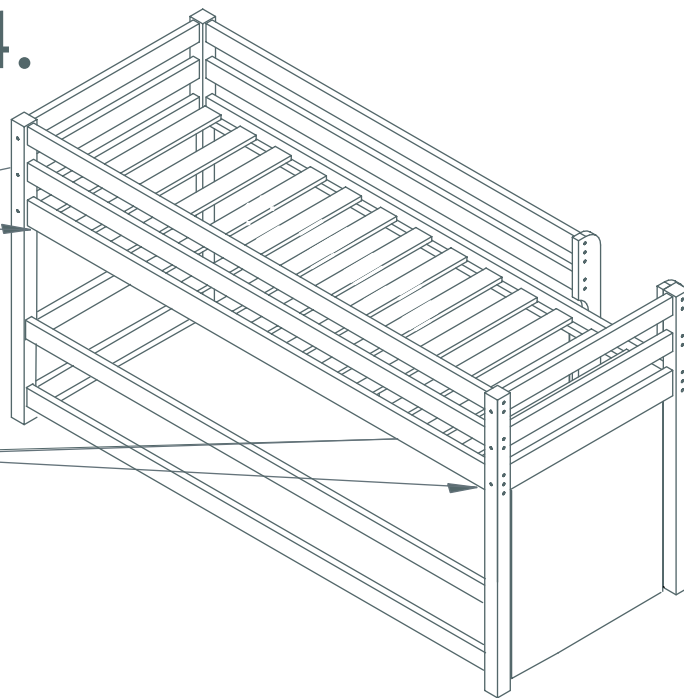

5.

