

Ⓓ Aufbauanleitung

Ⓕ Notice de montage

Ⓖ Handleiding voor de montage

Ⓒ Montážní návod

Ⓗ Szerelési útmutató

Ⓓ Montaj talimatları

Ⓖ Assembly instruction

Ⓙ Istruzione di montaggio



Ⓟ Instrukcja montażu

Ⓚ Navod na montaž

Ⓡ Instrucțiuni de montaj

Ⓡ Инструкция по монтажу

## 36-4601-LB-07M


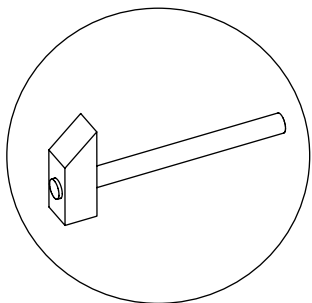
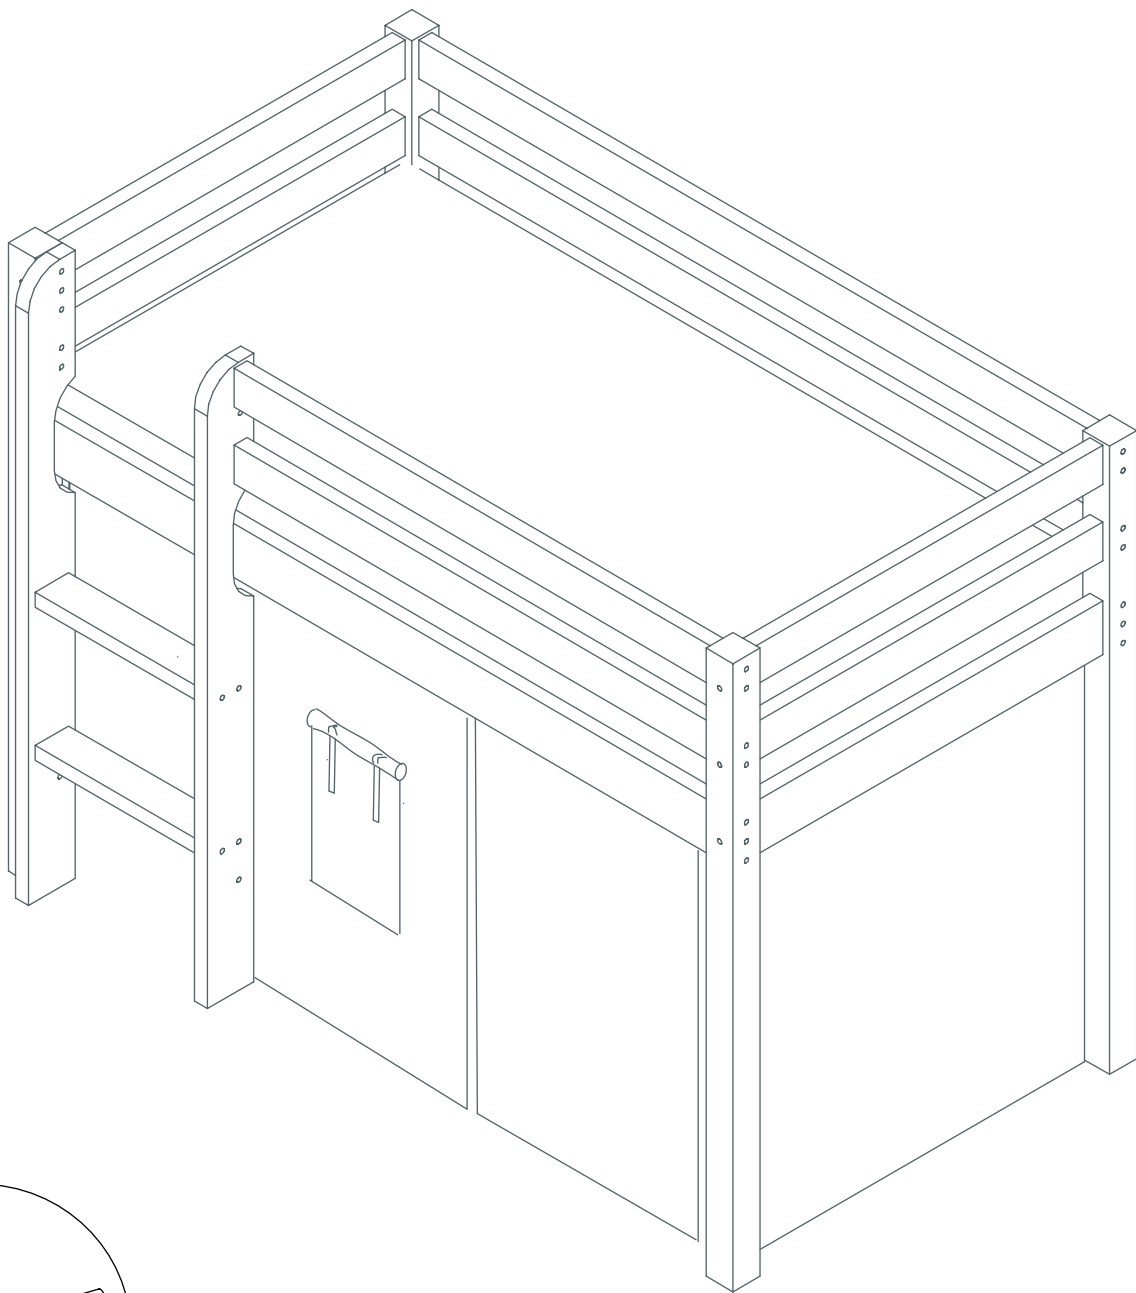


# Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam • Nazwa • Jméno • Názov  
Név • Denumire • Isim • Название


Nr. • No. • N° • Č • Sz • Номер

Typ • Type • Tip • Tipus • Druh • Тіро • Тип

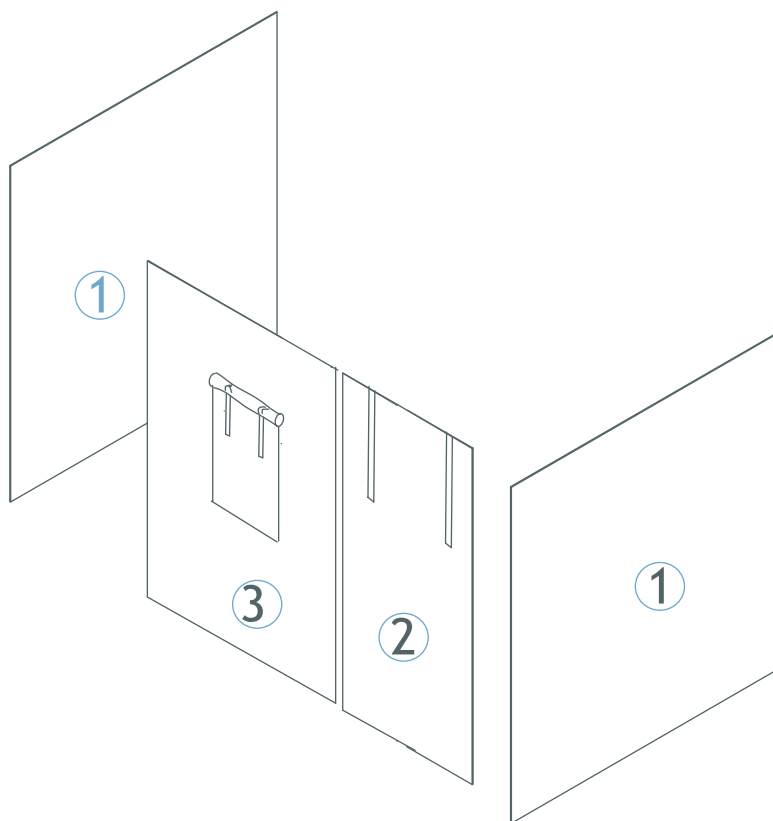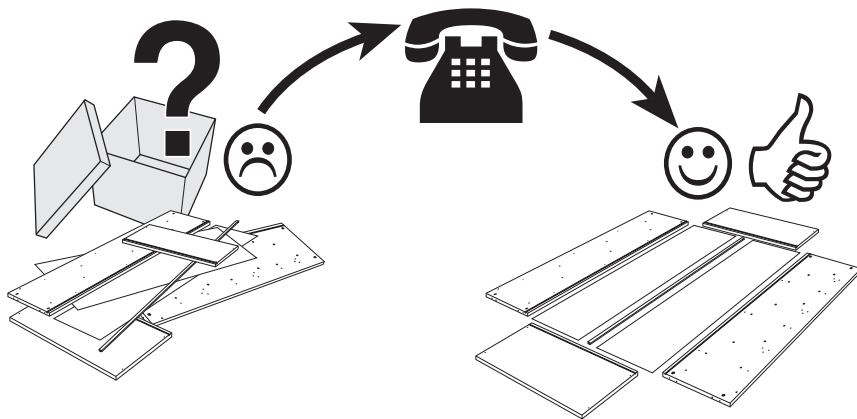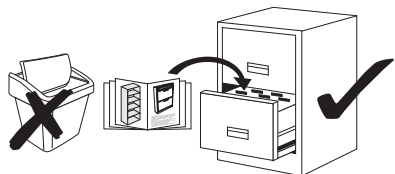

|   |    |
|---|----|
| 1 | x2 |
| 2 | x1 |
| 3 | x1 |

|   |             | mm        |    |
|---|-------------|-----------|----|
| a | 1-000146-07 | 2x25      | x6 |
| b | 1-000147-07 | 2x25      | x6 |
| c | 1-000149-75 | 3,75x1400 | x1 |
| d | 1-000148-75 | 3,75x600  | x2 |

 

a



b




c




d


1-000001=

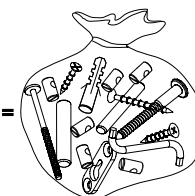


1.

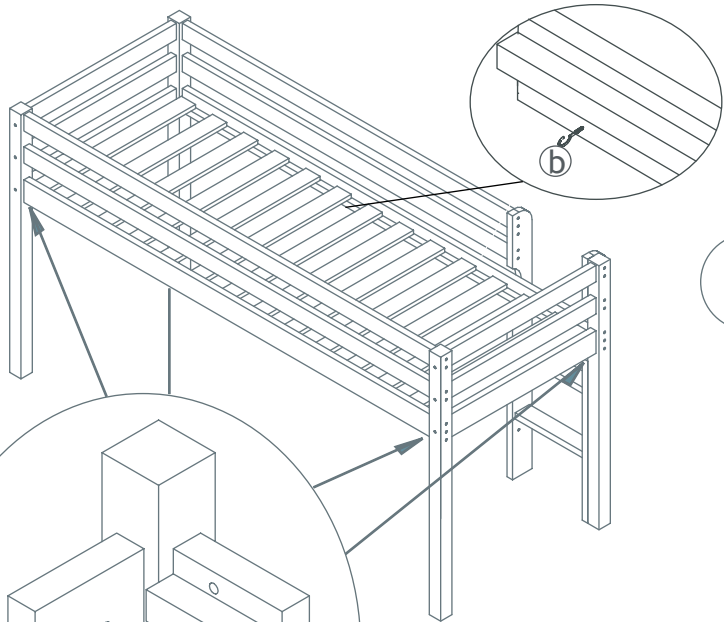


2.

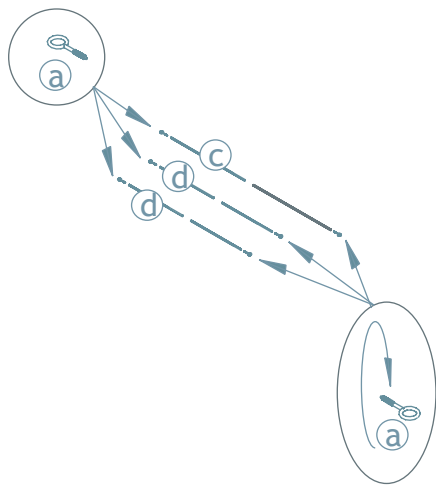

3.

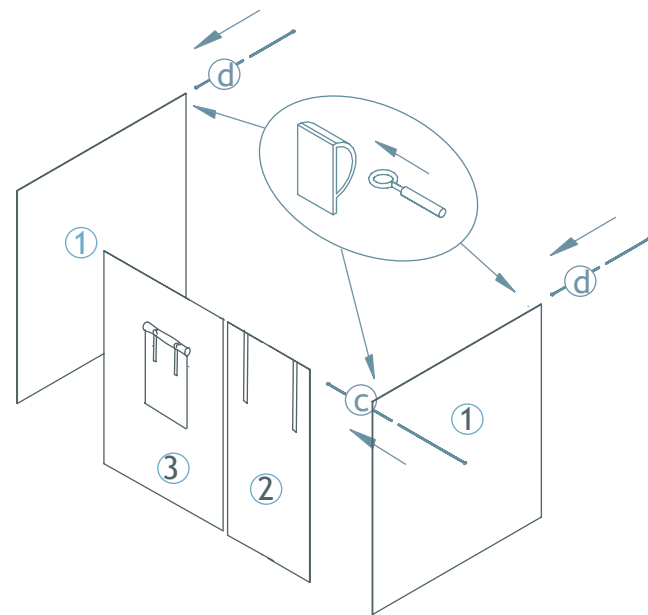

4.

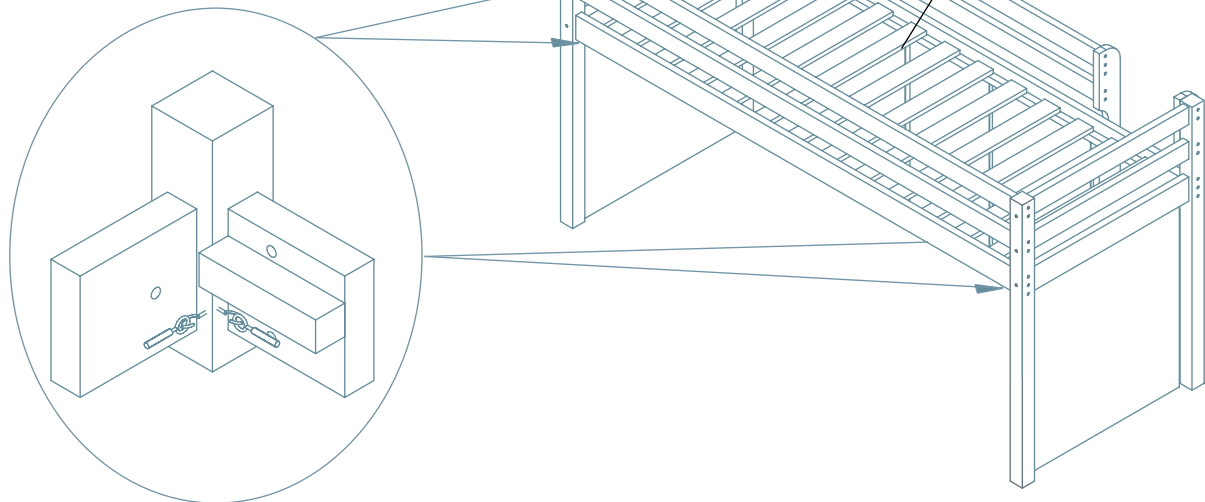

5.

