

Ⓓ Aufbauanleitung

Ⓕ Notice de montage

Ⓖ Handleiding voor de montage

Ⓒ Montážní návod

Ⓗ Szerelési útmutató

Ⓓ Montaj talimatları

Ⓖ Assembly instruction

Ⓙ Istruzione di montaggio



Ⓟ Instrukcja montażu

Ⓙ Navod na montaž

Ⓡ Instrucțiuni de montaj

Ⓡ Инструкция по монтажу

36-4601-LR-07M


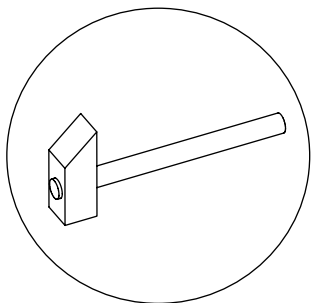
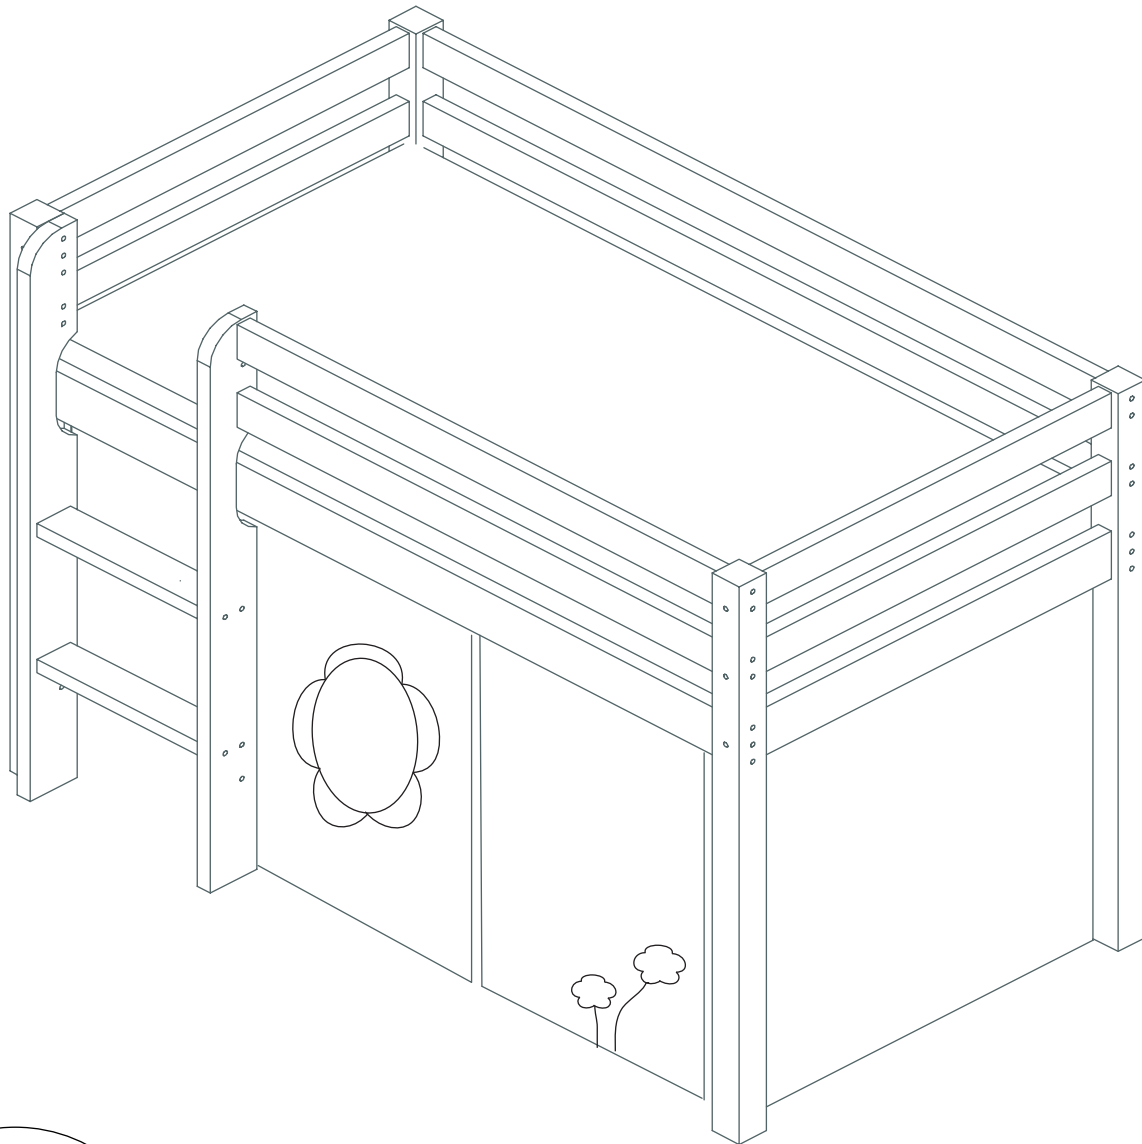


Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam • Nazwa • Jméno • Názov
Név • Denumire • Isim • Название

Nr. • No. • N° • Č • Sz • Номер


Typ • Type • Tip • Tipus • Druh • Тип • Тип

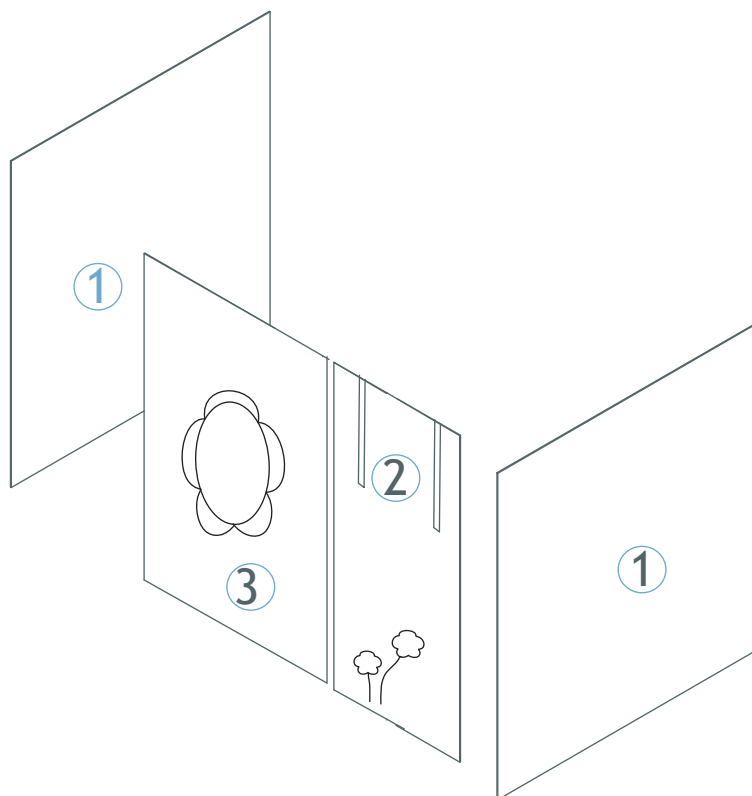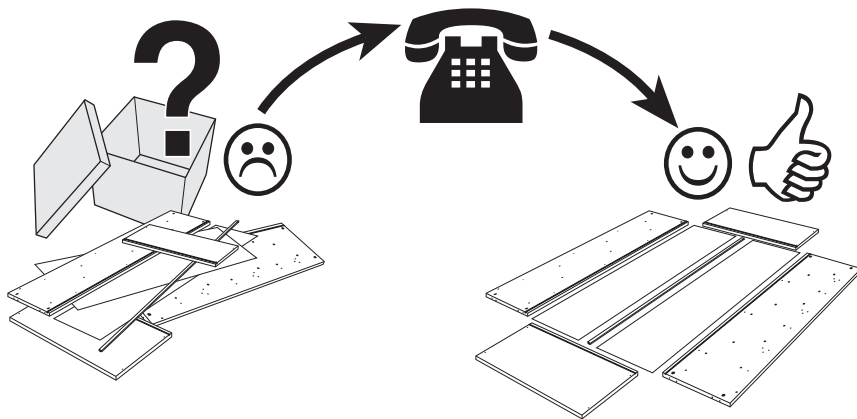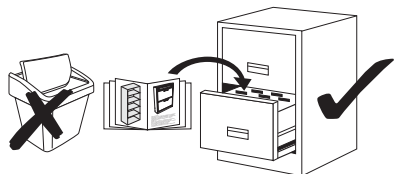

1	x2
2	x1
3	x1

0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180

		mm	
a	1-000146-07	2x25	x6
b	1-000147-07	2x25	x6
c	1-000149-75	3,75x1400	x1
d	1-000148-75	3,75x600	x2

 

a



b




c




d


1-000001=

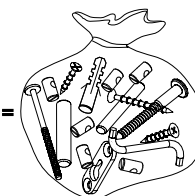


1.

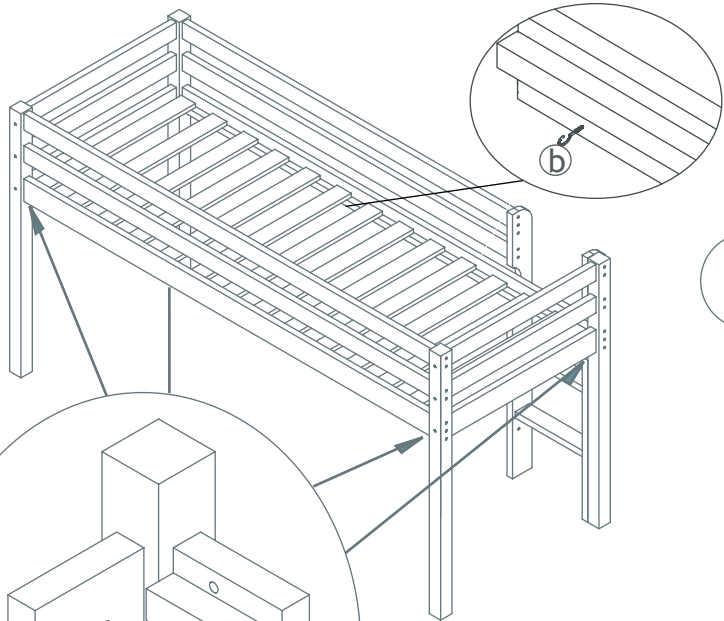


2.

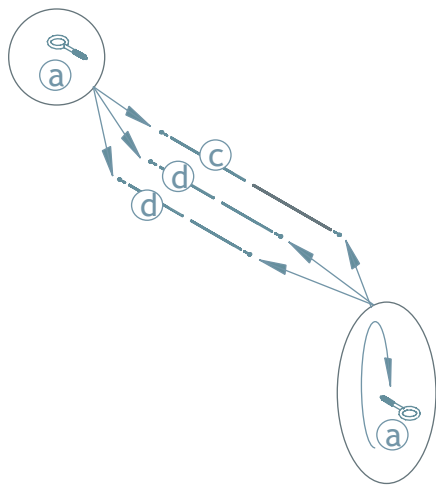

3.

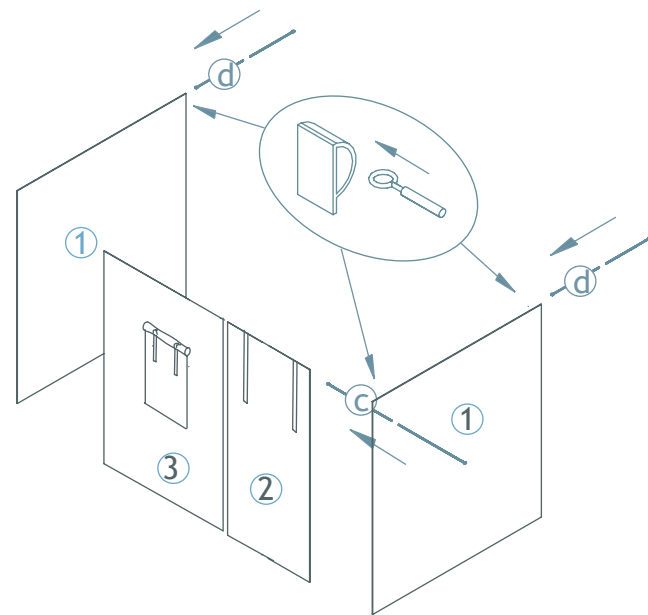

4.

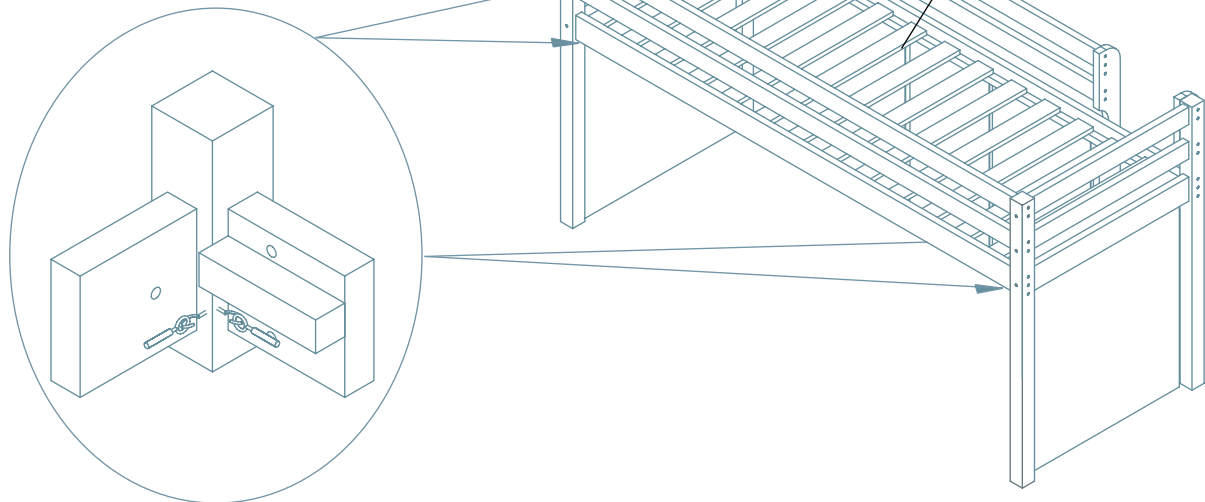

5.

