

Ⓓ Aufbauanleitung

Ⓕ Notice de montage

Ⓖ Handleiding voor de montage

Ⓒ Montážní návod

Ⓗ Szerelési útmutató

Ⓓ Montaj talimatları

Ⓖ Assembly instruction

Ⓙ Istruzione di montaggio

Ⓗ Instrukcja montażu



Ⓙ Navod na montaž

Ⓙ Instrucțiuni de montaj

Ⓙ Инструкция по монтажу

36-4623-LR-07M

36-4623-LB-07M


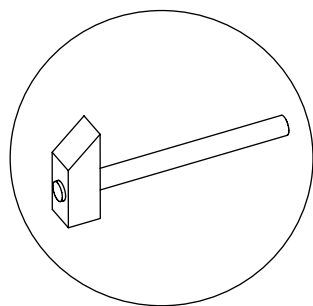
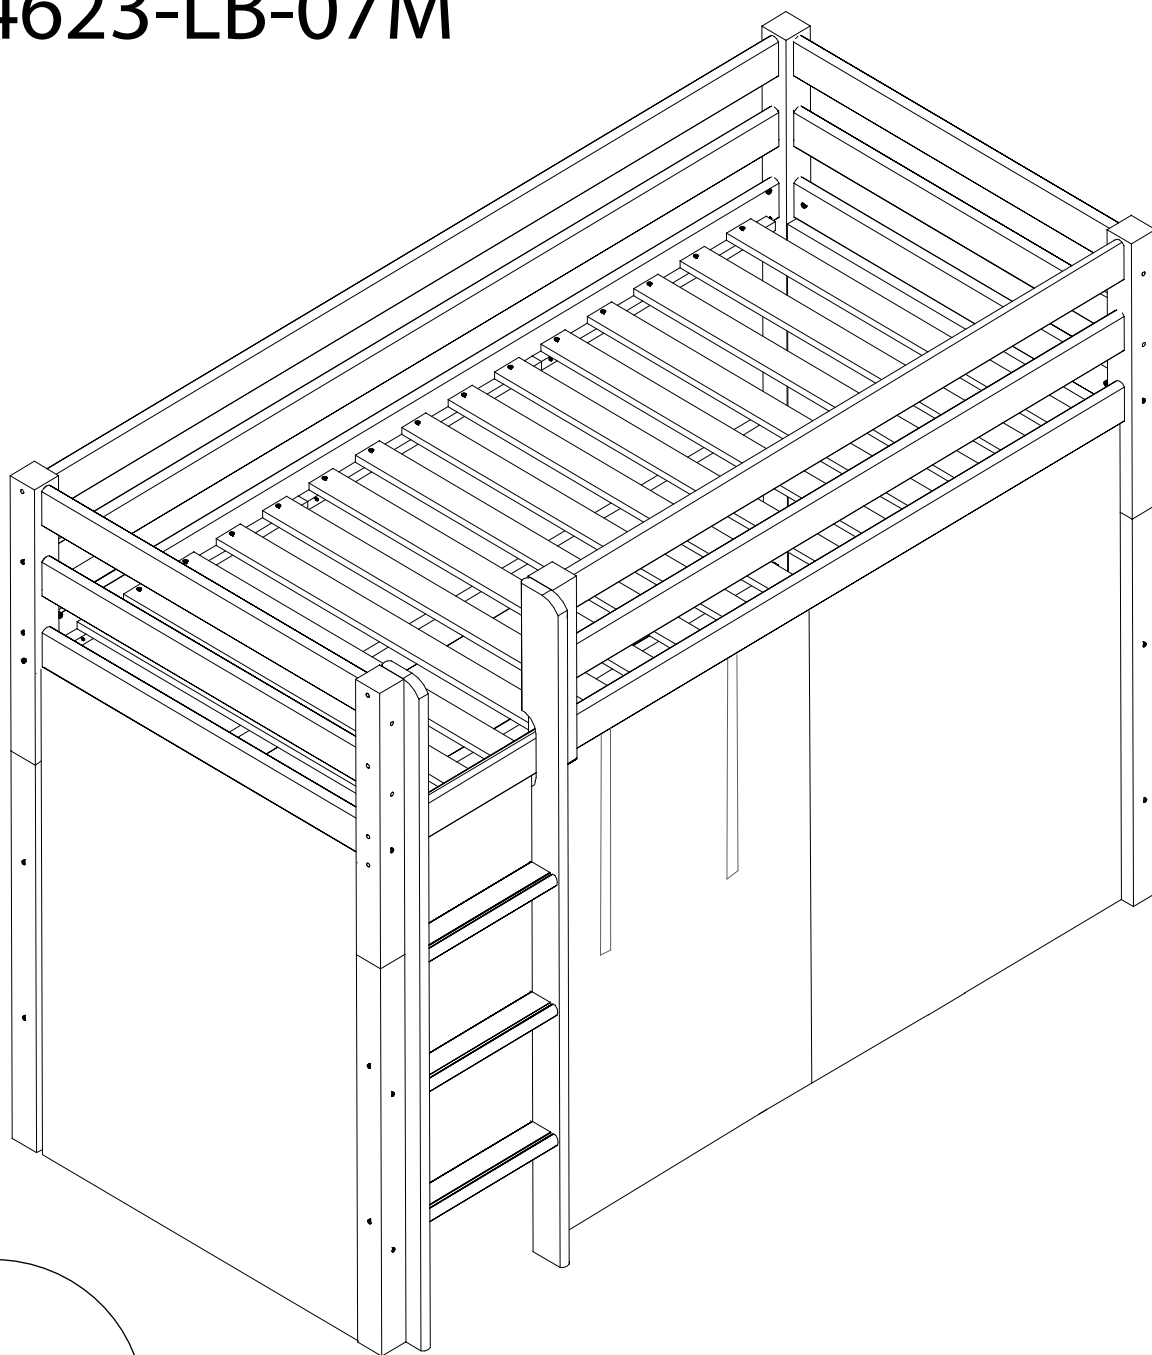


# Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam • Nazwa • Jméno • Názov  
Név • Denumire • Isim • Название


Nr. • No. • N° • Č • Sz • Номер

Typ • Type • Tip • Tipus • Druh • Тіро • Тип

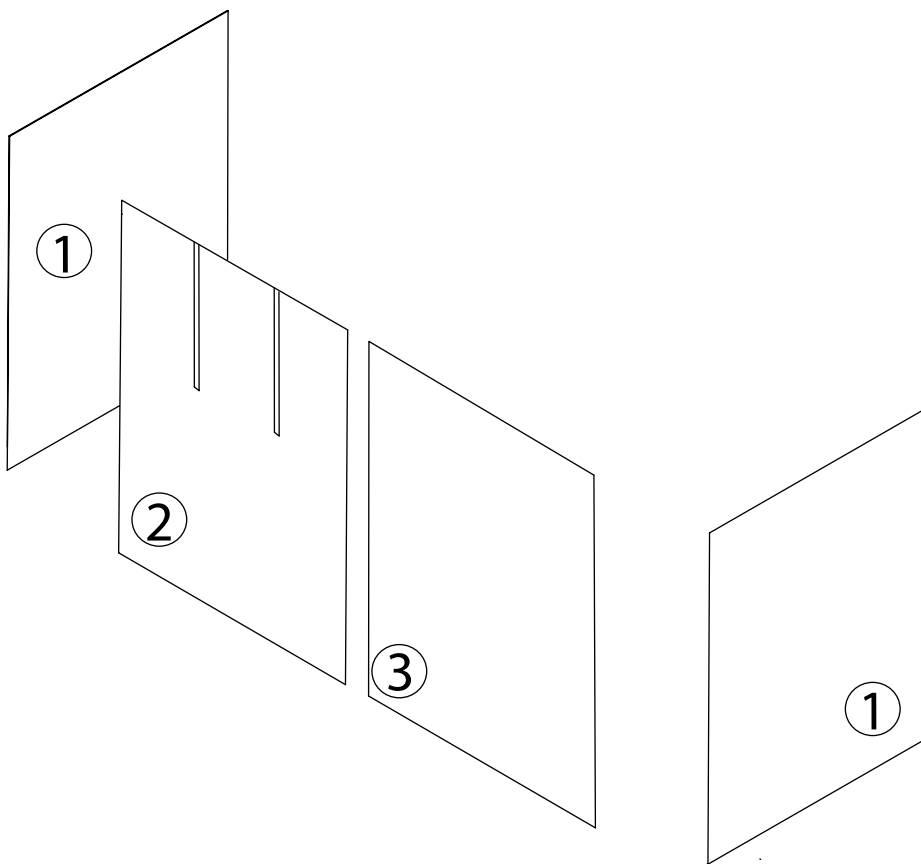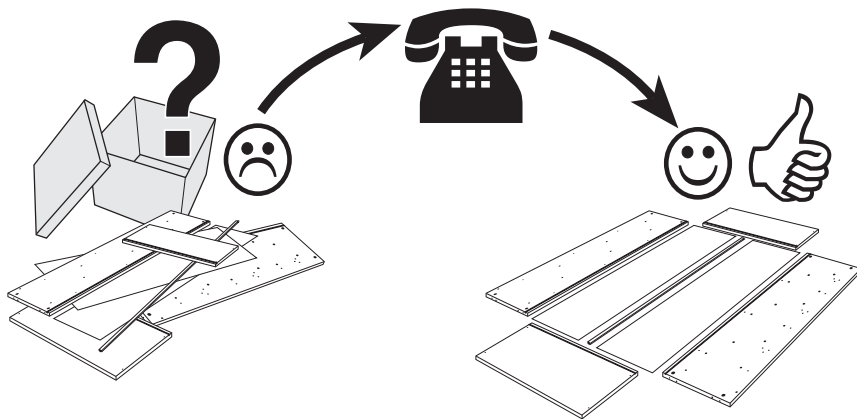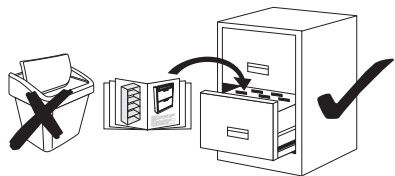

1	x2
2	x1
3	x1

		mm	
a	1-000146-07	2x25	x6
b	1-000147-07	2x25	x7
c	1-000151-75	3,75x1400	x1
d	1-000150-75	3,75x600	x2

 

a



b




c




d


1-000001=

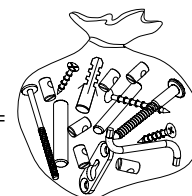


1.

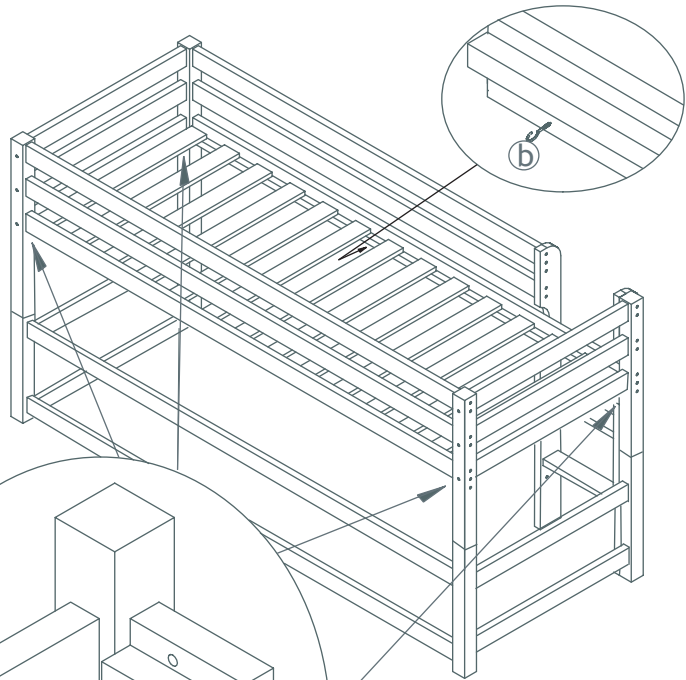


2.

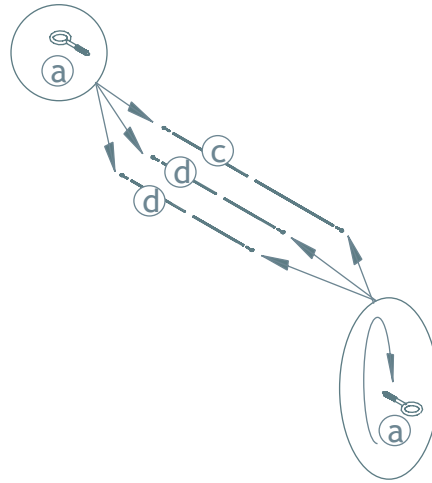

3.

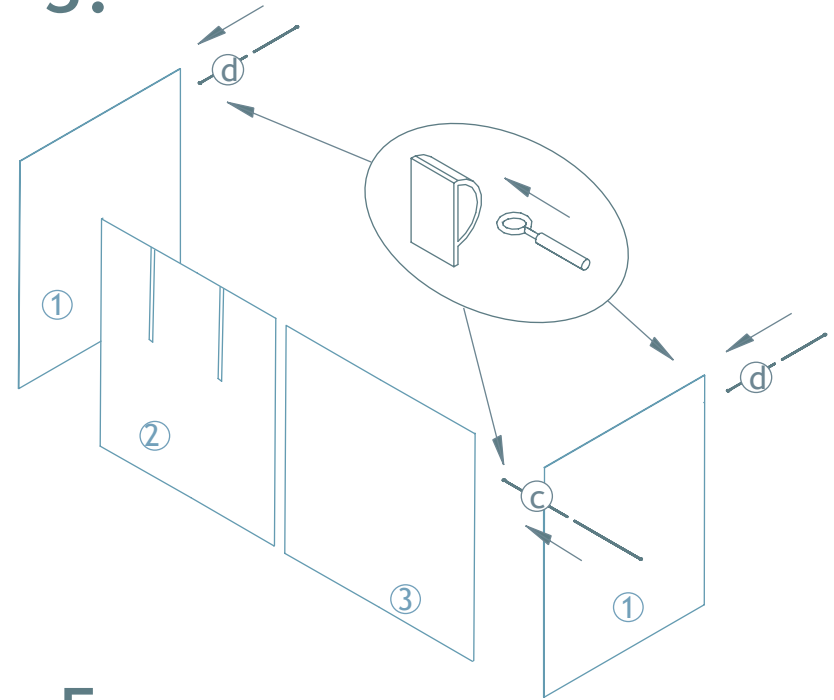

4.

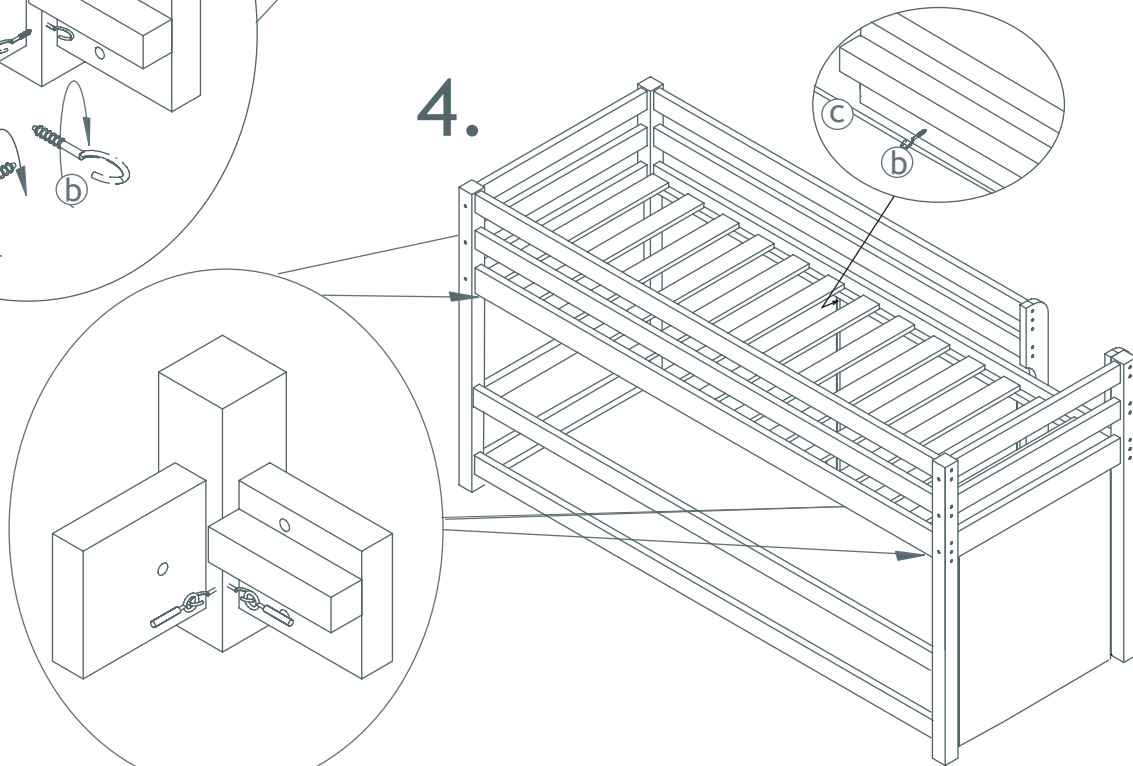

5.

